



# ESP-5100

## Residential ESS Manual

### About ESP-5100 ESS

ESP-5100 ESS can be installed in Parallel and Series mode, more attention should be paid for the DIP and address selection following with part 5.3.2.

### About this Manual

The Manual is intended for the ESP-5100 Residential ESS, but the hybrid inverter and any other equipment is not included.

# Contents

1 Safety Instructions.....	3
1.1 Important Safety Instructions.....	3
1.2 Warnings in this Document.....	3
1.3 Battery handing guide.....	3
1.4 Response to emergency situations.....	4
1.4.1 Leaking batteries.....	4
1.4.2 Fire.....	4
1.4.3 Wet battery.....	4
1.4.4 Damaged battery.....	4
1.5 Installers.....	5
1.6 Scrap battery.....	5
1.7 Customer careline.....	5
2 Product Introduction.....	5
2.1 Technical data.....	5
2.2 Exploded views of battery.....	6
2.3 Indicator and ports.....	7
2.4 Communication interface plat (DVC-A <sub>2</sub> voltage).....	7
2.5 How it works.....	8
2.6 Feature.....	8
3 Guidance for disconnection of batteries during shipment.....	9
4 Installation Prerequisites.....	9
4.1 Installation location.....	9
4.2 Installation process.....	10
4.3 Installation materials.....	11
4.4 Tools.....	11
4.5 Safety instruments.....	11
4.6 Network cable.....	12
4.7 Storage.....	12

5 Battery Installation .....	12
5.1 Package items .....	13
5.2 Checks before installation .....	13
5.3 Installation the battery .....	14
5.3.1 Connect with 51.2Vdc Inverter .....	14
5.3.1.1 Wall mounting .....	14
5.3.1.2 Ground installation .....	15
5.3.2 Address selection of Master and Slave Battery (Batteries) connection .....	16
5.4 Cable connections .....	18
5.4.1.1 Ground installation .....	19
5.4.1.2 Wall mounting .....	20
5.4.2 Cable connection for Parallel connection .....	20
6 Configuration .....	21
6.1 Configure device WIFI .....	21
6.2 Register your account .....	23
6.3 Settings for CAN /485 bus pins .....	23
7 Commissioning .....	24
7.1 Commissioning battery .....	24
7.2 Shutting down battery .....	25
8 Troubleshooting .....	25
9 Firmware Update .....	26
9 Warranty of ESP Residential ESS .....	29
10 RED Declaration of Conformity (DoC) .....	31

## 1 Safety Instructions

### 1.1 Important Safety Instructions

This manual contains important instructions for:








#### ESP-5100 Residential ESS product

This manual must be followed when installing and using this product.

The product is designed and tested in accordance with international safety requirements IEC 60364, but as with all electrical and electronic equipment, certain precautions must be observed when installing and/or operating the product. To reduce the risk of personal injury and ensure the safe installation and operation of the product, you must carefully read and follow all instructions, cautions and warnings in this manual.

### 1.2 Warnings in this Document

A warning describes a hazard to equipment or personnel. It calls attention to a procedure or practice, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the ESP equipment and/or other equipment connected to the ESP equipment or personal injury.

Symbol	Description
	Caution, risk of electric shock
	Heavy enough may cause severe injury
	Keep the battery away from open flame or ignition sources
	Keep the battery away from children
	Do not dispose of the product with household waste
	Recycling
	Read this manual before installation and operation

For safety reasons, installers are responsible for familiarizing themselves with the contents of this manual and all warnings before performing installation.

If the batteries are not used for more than 8 months from the production date, it shall be charged once. The failure caused by the overdue failure to perform the standard operation is not within the scope of warranty.

### 1.3 Battery handing guide

Use the battery pack only as directed.

## 1.4 Response to emergency situations

The ESP Residential ESS is designed with multiple safety strategies to prevent hazards resulting from failures. However, ESP cannot guarantee their absolute safety for uncertain situations.

### 1.4.1 Leaking batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. Electrolyte is corrosive and contact may cause skin irritation and chemical burns. If one is exposed to the leaked substance, do these actions:

**Inhalation:** Evacuate the contaminated area, and seek medical attention immediately.

**Eyes contact:** Rinse eyes with flowing water for 15 minutes, and seek medical attention immediately.

**Skin contact:** Wash the affected area thoroughly with soap and water, and seek medical attention immediately.

**Ingestion:** Induce vomiting as soon as possible, and seek medical attention immediately.

### 1.4.2 Fire

In case of a fire, make sure that an ABC or carbon dioxide extinguisher is nearby and does not use water to extinguish the fire.

#### WARNING

The battery pack may catch fire when heated above 130°C.

If a fire breaks out where the battery is installed, do these actions:

- 1) Extinguish the fire before the battery catches fire.
- 2) If the battery has caught fire, do not try to extinguish the fire.

Evacuate people immediately

If the battery catches fire, it will produce poisonous gases. Do not approach.

### 1.4.3 Wet battery

If the battery is wet or submerged in water, do not try to access it. Contact ESP customer careline or your distributor for technical assistance.

### 1.4.4 Damaged battery

If the battery damaged, please contract ESP customer careline or your distributor for help as soon as possible, because damaged battery is dangerous and must be handled with extreme caution. Damaged battery is not suit for use and may pose a danger to people or property. If the battery seems to be damaged, return it to ESP or your distributor.

## CAUTION

Damaged battery might export electrolyte or flammable gas, so contact ESP for advice and information immediately. we will deal with it within 48h

### 1.5 Installers

ESP Energy Storage battery is suggested to be installed by skilled worker or electrician. A skilled worker is defined as a people who had been trained and qualified electrician or had all of the following skills and experience:

- ✓ Knowledge of the functional principles and operation of on-grid energy Storage systems.
- ✓ Knowledge of the dangers and risks associated with installing and using electrical devices and acceptable mitigation methods.
- ✓ Knowledge of the installation of electrical devices
- ✓ Knowledge of and adherence to this manual and all safety precautions and best practices.

### 1.6 Scrap battery

For scrap battery, please treat with local laws or regulations to recycle or scrap.

### 1.7 Customer careline

Use the contacts below for technical assistance. This phone numbers is available only during business hours on weekdays.

Customer careline	1-888-323-6387
-------------------	----------------

## 2 Product Introduction


### 2.1 Technical data

Model	ESP-5100
Total Energy*	5.1kWh
Battery Capacity (Ah)	100Ah
Nominal Charge/Discharge Power	2.5KW
Voltage	42-54Vdc
Recommended C Rate	0.5C
Nominal Voltage	51.2Vdc
Nominal Current	50A
Max. Charge Voltage	56Vdc
Recommended DOD	90%

Peak value	3149A / 4.6 ms
Operating Condition	Indoor
Operating Temperature (Charge)	0~45°C
Operating Temperature (Discharge)	-10~55°C
Dimensions (mm)	442*500*133
Weight	42Kg
Relative Humidity (R H)	20~60% (No condensed water)
Cooling Type	Ambient cooling
Case Material	Metal
Color	White
Installation	Cabinet or Wall Mounting
Enclosure	IP20
Protective Class	I
Max. Number of Parallel	8
WIFI Frequency Range	2400MHz - 2483MHz
Max. Transmission Power	< 20dBm
Warranty	10 Years
Communication	CAN/RS485
Protection Mode	Triple Hardware Protection
Battery Protection	Over-Current/Over-Voltage/Short Circuit/
Safety Certificate	CE & TUV (IEC 62619, IEC 62040) UL1973
Hanzrd Class of Dangerous Goods	9
Transportation	UN38.3

- ✧ Testing Conditions Based on Temperature 25°C at The Beginning of Life.
- ✧ Total Energy/Usable Energy Measured Under Specific Conditions From ESP 0.2C CC/CV

## 2.2 Exploded views of battery

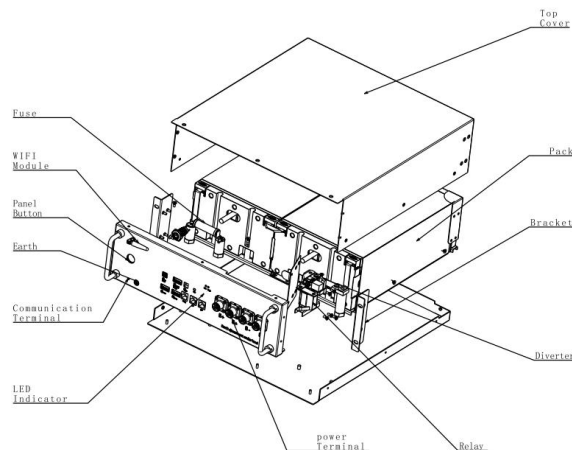

## 2.3 Indicator and ports

There are two LED indicators on the front of the battery to show its operating status.


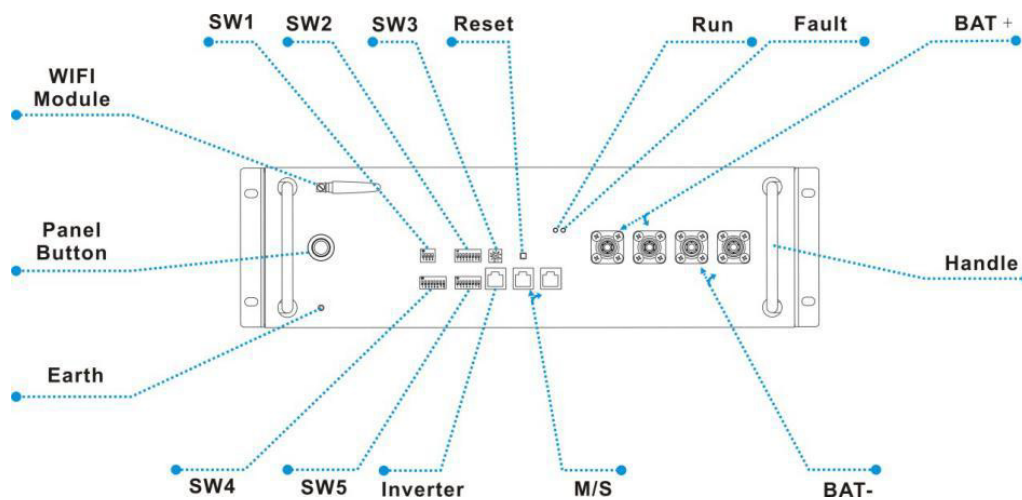


Table 2-1 Designations on the battery

Item	Designation	Definition
1	Running	Battery normally working without fault
2	Fault	Battery is in a warning state, see troubleshooting in <b>Chapter 8</b>





## 2.4 Communication interface plat (DVC-A<sub>2</sub> voltage)

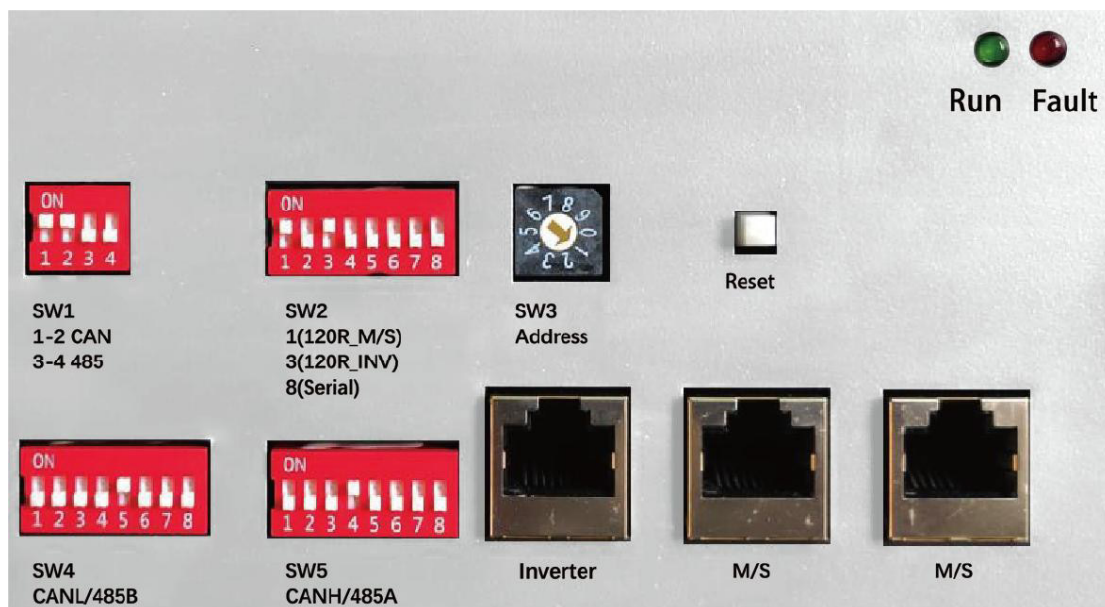

SW1	DIP switch select for CAN or RS485
SW2	Resistance for communication and DIP switch for parallel connection
SW3	Switch for battery's Address select
SW4 & SW5	Communication interface for battery or master battery with Inverter
Reset	Reset the WIFI or GPPS/GPS module configuration



## 2.5 How it works

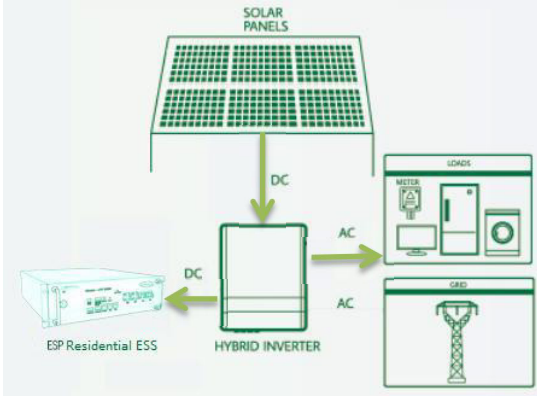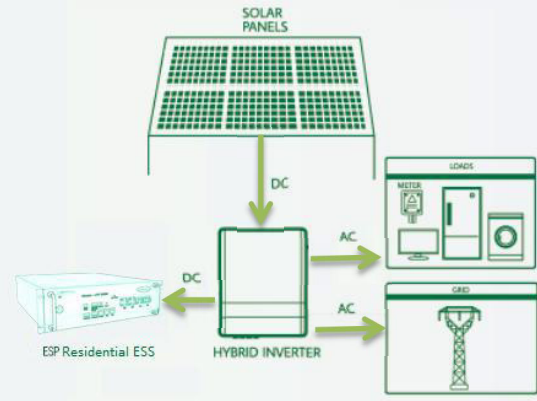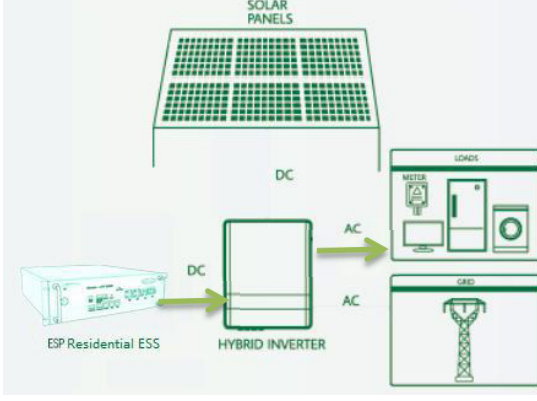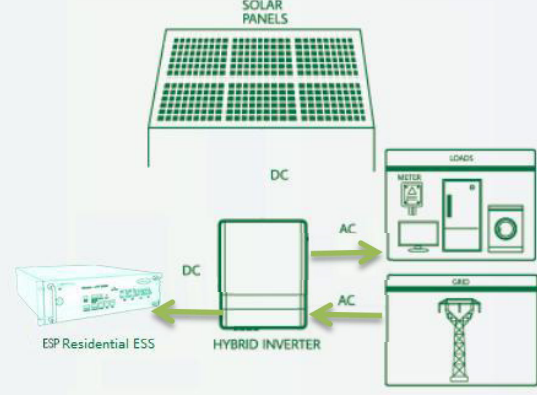Morning	Afternoon
	
<p>Optimized self consumption will be achieved. ESS are used to store the excess energy produced by PV system.</p>	<p>Extra energy will be fed into the grid ESS are fully charged and system has already its self consumption requirement.</p>
Evening	Night
	
<p>ESS will power the AC load when the sun sets.</p>	<p>If the ESS capacity is insufficient to meet self consumption requirement, electricity will be obtained from the grid.</p>

## 2.6 Feature

The ESP Residential ESS has following features:

- ✓ **Energy storage unit:** This battery is suit for PV solar system compatibility.
- ✓ **Battery management system (BMS):** The battery built-in BMS monitors It prevents the battery from running outside of the design limitations. See **Troubleshooting on Chapter 8.**
- ✓ **Monitor:** The battery BMS built-in with WIFI module, the battery running

information could be seeing in mobile phone and computer.

- ✓ **Easy firmware update:** The BMS firmware can be updated to the latest version. See **Chapter 9 Firmware Update**.
- ✓ **Expandability:** The battery capacity can be increased by adding another battery. See **part 5.4 cable connections**.

### 3 Guidance for disconnection of batteries during shipment

- 1) Cartons that have been crushed, punctured, or torn in such a way that contents are revealed shall be set aside in an isolated area and inspected by a skilled person. If the package is deemed to be not shippable, the contents shall be promptly collected, segregated, and either the consignor or consignee contacted.
- 2) The DC circuit of ESP Residential ESS has been disconnected before outgoing.
- 3) A precautionary label had been affixed to the shipping carton to alert individuals as to the battery within the package have been disconnected; otherwise, the battery should not be transported.
- 4) We have conducted comprehensive tests to ensure the equipment they distribute around the world is safe for shipping transport. These products shall be handled with care and immediately inspected if visibly damaged. If the carton visibly damage, please contract with ESP customer careline to confirm whether the battery could be used safely or not.



## 4 Installation Prerequisites

### 4.1 Installation location

Make sure that the installation location meets the following conditions:

- ✓ The building is designed to withstand earthquakes.
- ✓ Far away from the sea to avoid salt water and humidity.
- ✓ The floor is flat and level.
- ✓ No flammable or explosive materials nearby.
- ✓ Optimal ambient temperature is between 15°C and 30°C.


- ✓ Temperature and humidity stays at a constant level.
- ✓ Minimal dust and dirt in the area.
- ✓ No corrosive gases present, including ammonia and acid vapor.

The ESP Residential ESS is rated at IP20, so the battery could be installed indoor.

If the ambient temperature is outside the operating range, battery will protect itself by shutting down. The battery optimal operate temperature is 15 °C to 30 °C. Frequent exposure to severe operating condition would exacerbate the performance and lifetime of the battery.

#### 4.2 Installation process

The battery should be installed according to the following flow chart.

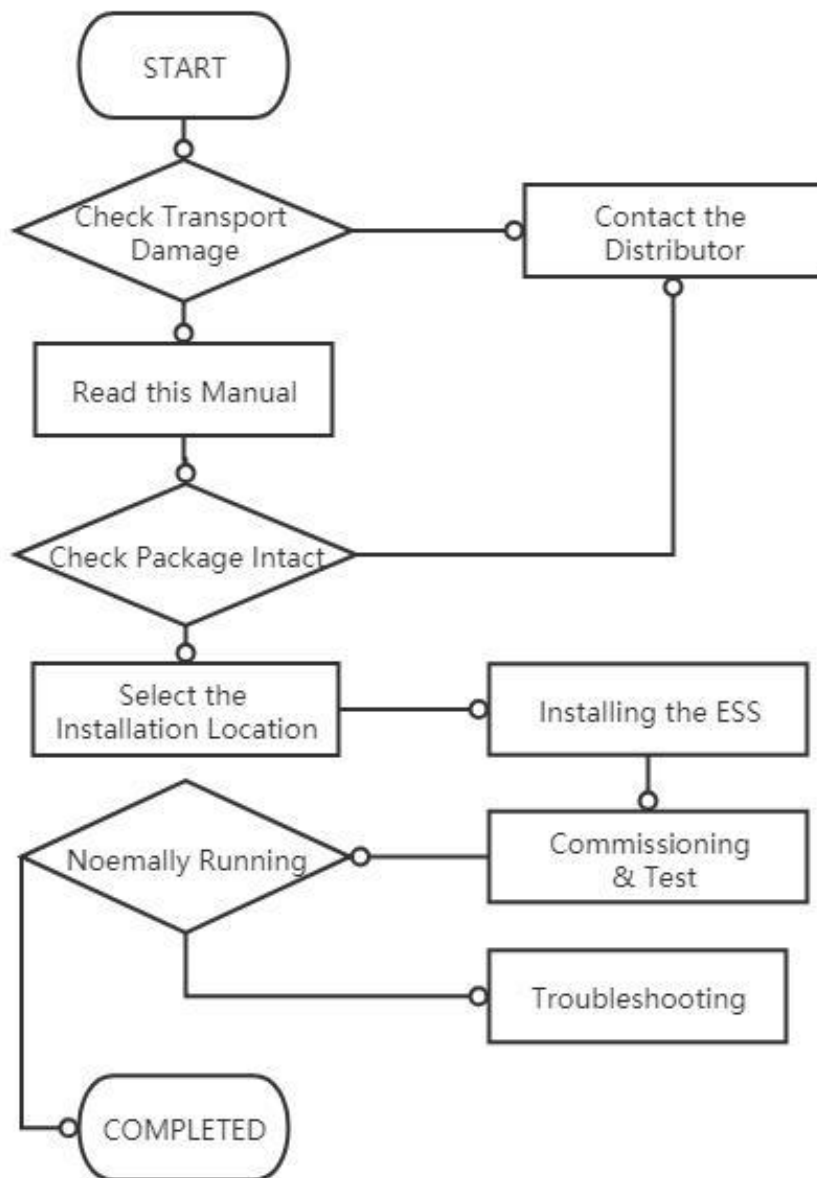

### 4.3 Installation materials

Following installation materials should be prepared by installers.

- ✓ Power cable
- ✓ Data cable
- ✓ Ground wire
- ✓ Bipolar external isolator, when two or more battery systems in parallel, each of them shall have a bipolar isolator.






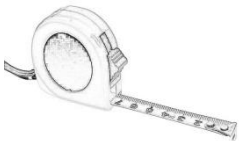
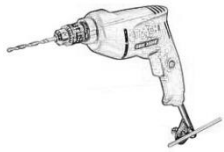

#### NOTICE

Make sure that the cross-sectional area of charging cables is 25 to 35 mm<sup>2</sup>.

A breaker between ESP battery and inverter was recommended to install, and the breaker's min. current should be over 150A or following with local regulations.

### 4.4 Tools


To install the battery pack, those following tools are probably required:

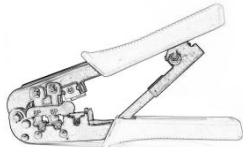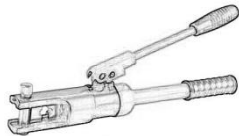			
Phillips screwdriver	Torque wrench	Cable crimper	Wire clamp
			
Voltmeter	Tape measure	Drill	Flat-head screwdriver

In order to protect operator and installer's safety, please select and use suitable tools and measuring instruments that are certified for precision and accuracy.

### 4.5 Safety instruments

When dealing with the battery, following safety gears should be equipped. Installers must meet the relevant requirements of IEC 60364 or the domestic legislation and other relevant international standards.

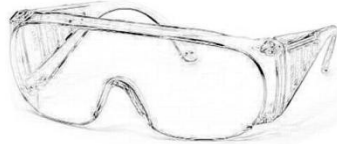


Insulated glove

Safety goggles

Safety shoes

#### 4.6 Network cable

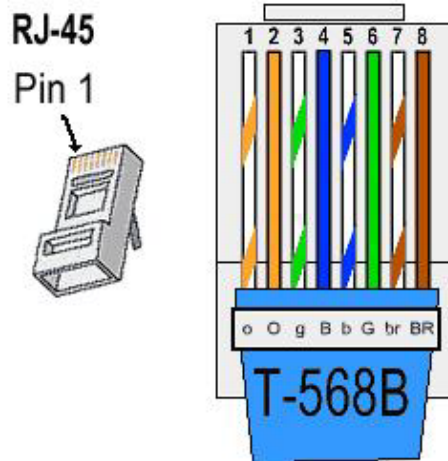

If needed, the network cable should be made like that diagram. But the network cable between battery and Inverter should be made following the definition of Inverter. If available, use a LAN cable tester to check whether the cable is faulty.

#### 4.7 Storage

If the battery is not to be installed immediately, or removed from operation and needs to be stored for a long period, please choose an appropriate location to store it. Instructions for storage are:

- ✓ Do not stack more than 8 battery boxes.
- ✓ The temperature of battery stored recommended in the range of  $-20^{\circ}\text{C}$  to  $25^{\circ}\text{C}$ .
- ✓ Do not expose to water

The ESS box should be upright and not stacked upside down when storing the ESS box.

If the ESS needs to be stored over 3 months, the DC circuit of battery suggests to be disconnecting. Otherwise, the battery would discharge at a minimum rate and capacity degrades depended on storage time, the battery self-consumption less than 5w. And, if the battery stored over 6 months, it is suggested to connect the battery with inverter and commission the system.

### 5 Battery Installation

## 5.1 Package items

These items are included in the package.



Battery\*1

Cardboard\*1

User Manual



Warranty

Battery link\*2

Data Cable\*1

## 5.2 Checks before installation

There are a few things to check before installing the battery to ensure that it has no defects.

Check item 1: Check the battery voltage.

### WARNING

If this checking process is executed for any reason after the battery is fully installed, make sure that the inverter is turned off or break the connection between battery and inverter while checking the battery.

Press and hold the panel button for about 4s and then release it after the two LED lights on, measure the voltage at the terminal interface with a voltmeter. If the voltage is lower than 48 V, do not use the battery and contact ESP customer care line or your distributor.



## 5.3 Installation the battery

### NOTICE



The symbol located on the front of battery, For Parallel connection, the earth wire must be installed.

Apply silica gel or paint around the ground terminal after the ground cable is connected.


### 5.3.1 Connect with 51.2Vdc Inverter

To prevent the battery from moving, make sure the battery is fixed to a wall.

### NOTICE

If the battery is installed above the floor or on a platform, make sure that the wall or platform is capable of supporting the battery's weight.

#### 5.3.1.1 Wall mounting

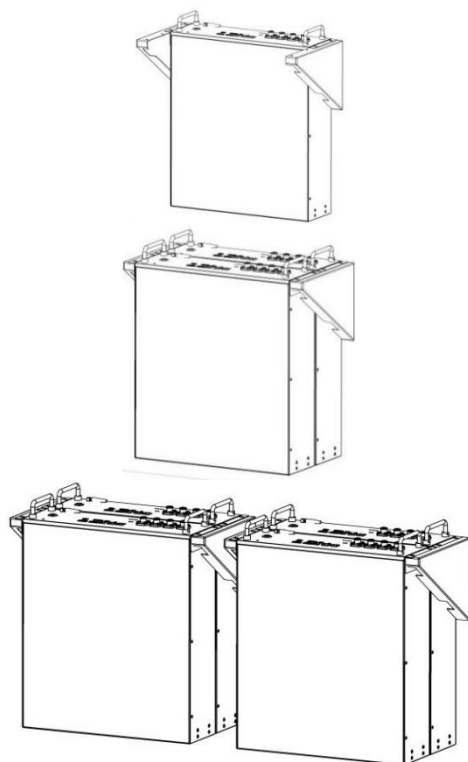





1. Determine bracket mounting place to be fixed using this Positioning cardboard.
2. Drill holes in the wall for the M8 expansion screw anchors, which depth should be at least 50 mm. Tighten the screws to a torque around 2.5 N·m.
3. Fasten the battery to bracket fasten hole with M6 screws with 2.0N·m roughly.
4. Meanwhile, two or four batteries could be installed by these brackets.

Note: if more than 4 batteries installed, a cabinet recommended to be selected for the battery's stable.

The installed location shall be restricted access or installed in a cabinet which provides a guard from pet and children.

### 5.3.1.2 Ground installation

Meanwhile, ESP-5100 battery also could be installed on floor, the installation step as following:

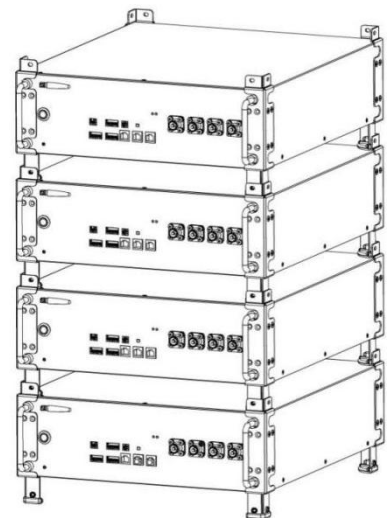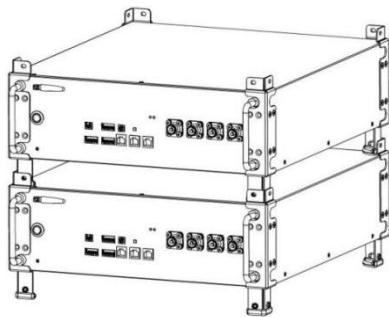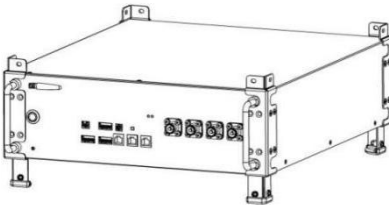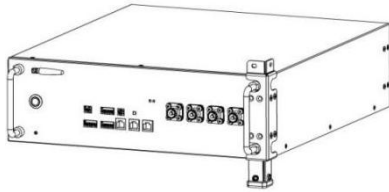


1. Fix the braced feet to battery 's mounting holes one by one.

2. If more power and energy needed, 2 to 4 batteries could be installed in one stack.

3. If the number of batteries at the range of 5 to 8, a cabinet recommended to be selected.



### 5.3.2 Address selection of Master and Slave Battery (Batteries) connection

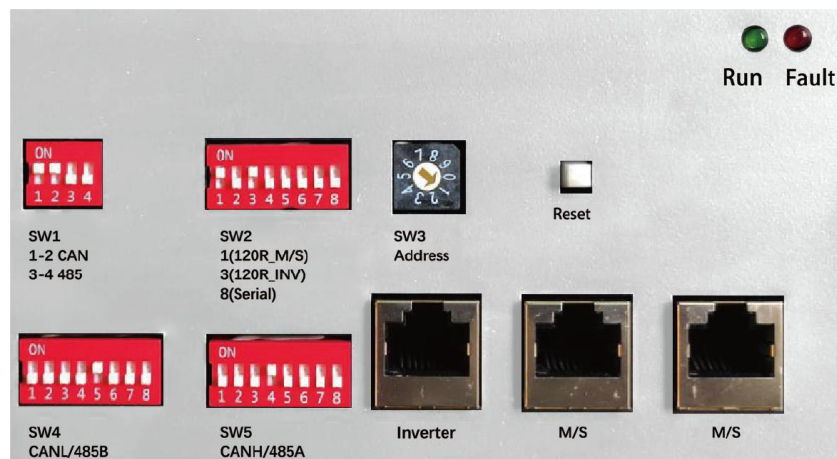


































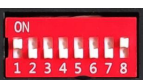






















































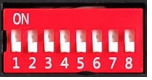

For Series connection, please make sure the SW2 DIP switch of selected as this type.

**WARNING**

Please make sure the SW2 DIP switch selected correctly, if the battery connected in Parallel mode, but select SW2 DIP8 at ON position, probably lead serious fault even dangerous. Meanwhile, if battery connected in Series mode select SW2 DIP8 at OFF status, serious fault and dangerous probably occurred.

Connected battery number	Group	Set of SW2		Address Set (SW3)
		Series connect	Parallel connect	
1	—	13	13	1
2	Master	138	13	2
	Slave	18	1	1
3	Master	138	13	3
	Slave 1	8	0	1
	Slave 2	18	1	2

4	Master	 138	 13	 4
	Slave 1	 8	 0	 1
	Slave 2	 8	 0	 2
	Slave 3	 18	 1	 3
5	Master	 138	 13	 5
	Slave 1	 8	 0	 1
	Slave 2	 8	 0	 2
	Slave 3	 8	 0	 3
	Slave 4	 18	 1	 4
6	Master	 138	 13	 6
	Slave 1	 8	 0	 1
	Slave 2	 8	 0	 2
	Slave 3	 8	 0	 3
	Slave 4	 8	 0	 4
	Slave 5	 18	 1	 5
7	Master	 138	 13	 7

	Slave 1	 8	 0	 1
	Slave 2	 8	 0	 2
	Slave 3	 8	 0	 3
	Slave 4	 8	 0	 4
	Slave 5	 8	 0	 5
	Slave 6	 18	 1	 6
8	Master	 138	 13	 8
	Slave 1	 8	 0	 1
	Slave 2	 8	 0	 2
	Slave 3	 8	 0	 3
	Slave 4	 8	 0	 4
	Slave 5	 8	 0	 5
	Slave 6	 8	 0	 6
	Slave 7	 18	 1	 7

#### 5.4 Cable connections

#### WARNING


Before connecting battery with inverter, please make sure that no inverter connected or the inverter turned off.

## 5.4.1 Cable connection for Series connection

### NOTICE

The voltage difference of each battery should be less than 100mV.


### 5.4.1.1 Ground installation

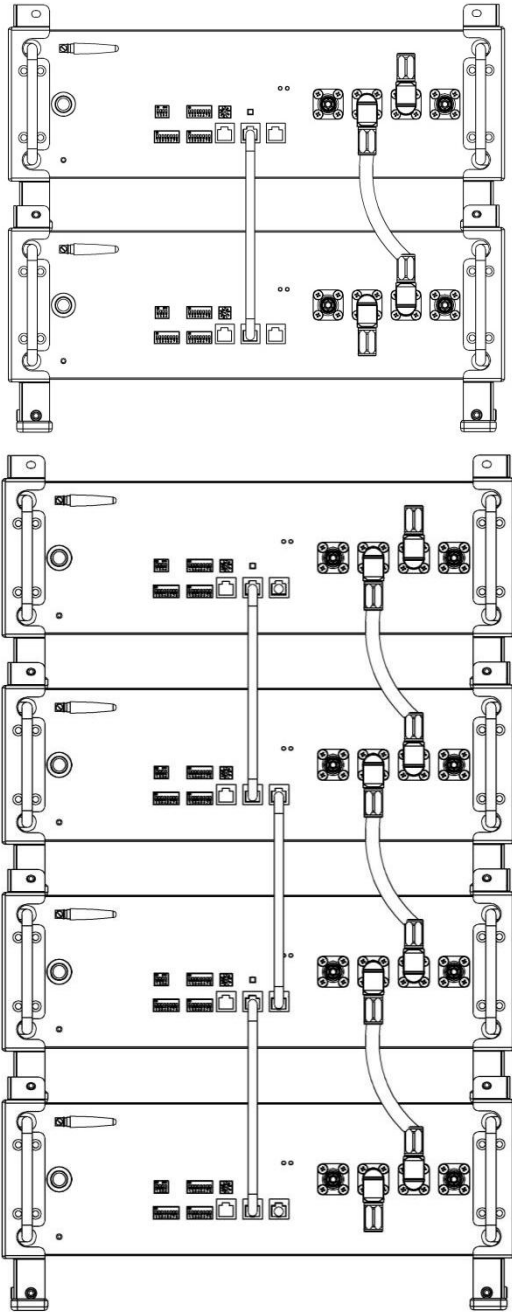

Feed a data cable to M/S communication terminal interface one by one directly.

If more than 4 batteries installed, a cabinet was recommended.

### 5.4.1.2 Wall mounting

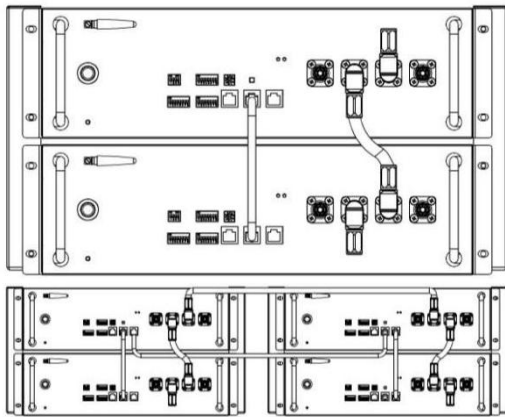


For wall mounting, the battery Series connection number should be less than 4, if more batteries installed, a cabinet was recommended.

#### NOTICE

If battery connected in Series mode, it's better to be installed in Ground installation method, for the Power cable resistance difference between stack and battery pack, which will have fade effect on voltage balance.


### 5.4.2 Cable connection for Parallel connection

#### 5.4.2.1 Ground installation

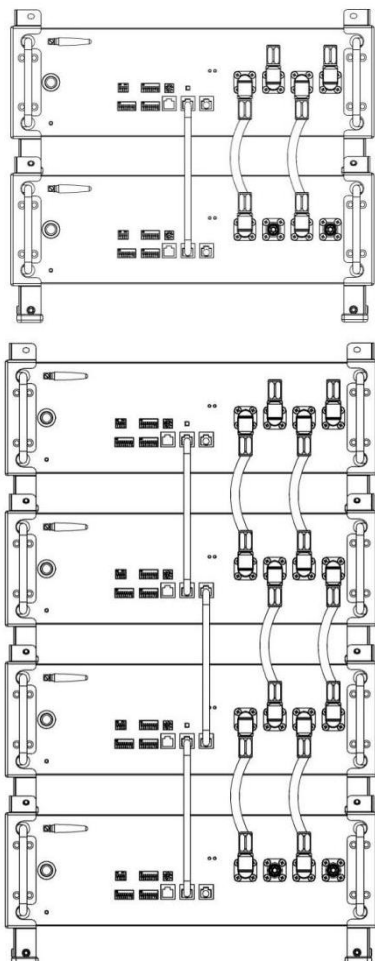

For parallel installation, please pay attention on Cable connection, and the DIP8 of SW2 no need to be changed and stayed on Initial Factory state.

## 5.4.2.2 Wall mounting

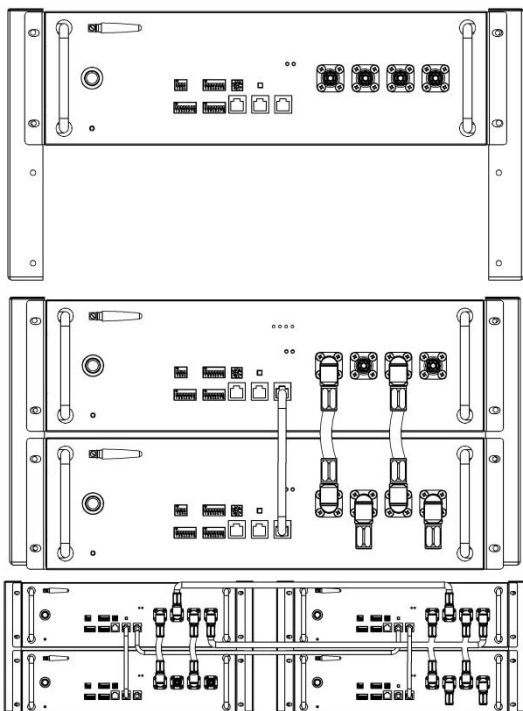

For wall mounting, the battery Series connection number should be less than 4, if more batteries installed, a cabinet was recommended.

### NOTICE

Before two or more batteries installed in parallel, please check the voltage of each battery and make sure the voltage different less than 2.0V.

## 6 Configuration


DIP switch should be set correctly for proper communication between inverter and battery.



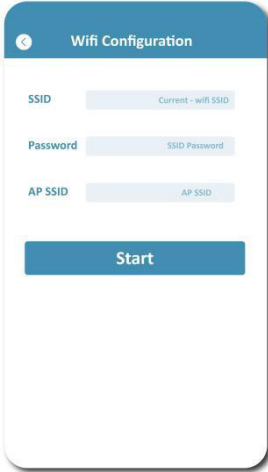
If parallel connecting multiple batteries, please set the DIP switches as following:

### 6.1 Configure device WIFI

The ESP Residential ESS has a built-in WIFI module for use with the ESP APP.

The WIFI setting of battery should be as following

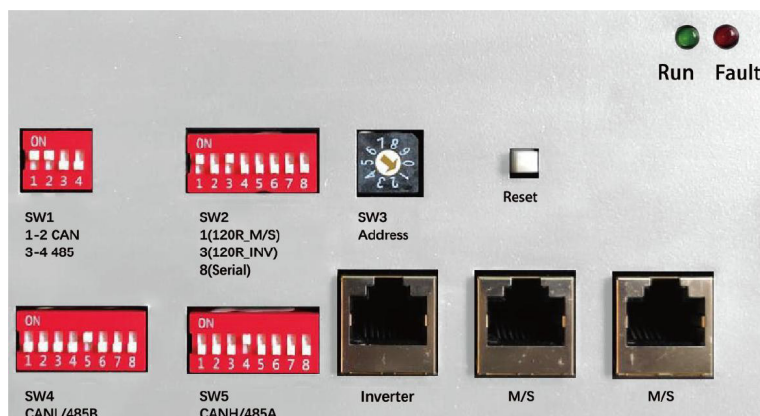

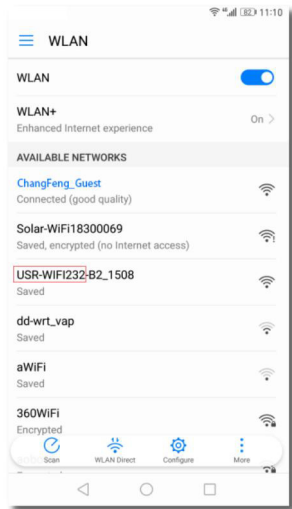Step		
1	Press and hold the Reset button for 7 seconds.	
2	Connect the 'USR-WIFI232-XX_XXXX' with your smart phone, and then the light of WIFI will turn on by itself within 5 seconds.	
3	Open the APP monitor of battery, select 'Wifi Config' option box.	
4	Search and select SSID connected and input the password, press ok and finish. The light of WIFI module would light automatically under WLAN accessible condition.	


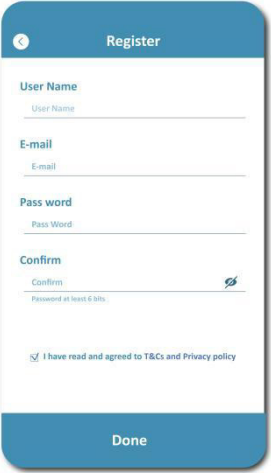
**NOTICE**

If the WIFI cannot be set or there is no WLAN accessible, the battery can still operate normally.

**6.2 Register your account**

**NOTICE**

The ESP Residential ESS could be registered only one time.


Step		
1	Open the APP monitor of battery, select 'Register' option box.	
2	After those messages filled and signature, the APP would jump to the running interface automatically.	

**NOTICE**

The ESP Residential ESS running is not associated with registration or not.

**6.3 Settings for CAN /485 bus pins**



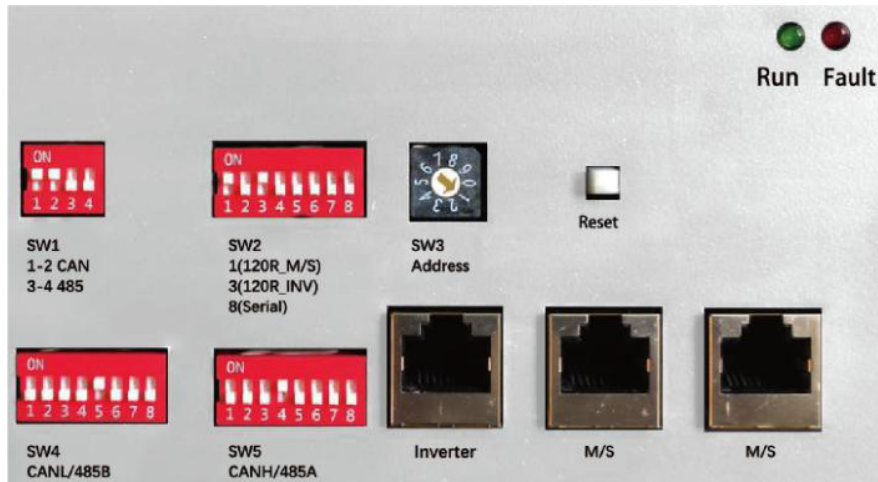

Confirm that the CANL/485B DIP switch is set to SW4 which pin is used for CAN low signal by inverter (5-CANL/485B), and the CANH/485A DIP switch is set to SW5 which pin is used for CAN high signal by inverter (4-CANH/485A).

As SW1 the CAN/485 GND/DIP switch, installer should confirm which pin is used for ground by inverter or not.

**NOTICE**

The battery default protocol is CAN bus, if an inverter communication mode is RS485 or other protocol, please contact ESP customer careline before installed the battery.

## 7 Commissioning

### 7.1 Commissioning battery

If there is only one battery installed, use the following steps to put it in operation:

- 1) Press and hold the panel button on the left side of the unit for about 4s, after the indicator lights on, release the panel button.
- 2) Make sure that the Run light is on. If it stays off, do not use the battery and contact ESP or your distributor.
- 3) Turn the inverter on, and wait for the start-up sequence to complete fully.

When there are two or more batteries connected with parallel mode, after the charging cable and the data cable has been connected correctly, follow these steps to put them in operation:

- 1) Check battery voltage level is above 48V

If battery voltage is under 48V contact your distributor or ESP after service customer careline for help.

- 2) Press and **HOLD** the panel button for about 4s, after four seconds the indicator lights will turn on.

- 3) Release the panel button.

For all batteries, make sure that the Run light is on.

- a. Make sure the maximum voltage different between batteries less than 2.0V.
- b. If not, the installer should balance the battery voltage and then parallel connect batteries together.
- c. Set the DIP switches like part 6-3 Settings for CAN /485 bus pins.

- 4) Turn the inverter on, and wait for the start-up sequence to complete fully.

## 7.2 Shutting down battery

Shut down the battery only when the battery is no charge or discharge current which could be seen in your smart phone with APP.

- 1) Press and hold the Panel Button about 8s, after a disconnect voice of relay come can release it.
- 2) Make sure that every light on the battery is off.

## 8 Troubleshooting

- 1) Every fault is presented by a fault code. If the battery fault light is on, please check the Fault code in Homepage.
- 2) If the battery fault light on, pls check the Troubleshooting number in Homepage in your ESP APP, if the code is 0x1\*\*\*, this problem would be recovered by itself. But if the code is 0x2\*\*\* or 0x3\*\*\*, please contact the ESP after service customer careline or your distributor for help.
- 3) If the information of battery cannot be seen in the monitoring system, check the battery status first. If the battery status is OFF, please turn the battery on, and then check the WLAN is accessible for battery.
- 4) If Register the battery failure, please check the network of mobile phone nearby the battery installation site available and stable.

Table 8-1 Fault Code of Battery


Fault Code	Detail fault message
0x1001	Battery under voltage warning
0x1002	Battery over voltage warning
0x1003	Battery under temperature warning
0x1004	Battery over temperature warning
0x1005	Battery charge over current warning
0x1006	Battery discharge over current warning

0x1007	Cell over discharge warning
0x1008	Cell over charge warning
0x1009	Battery charge with over temperature warning
0x1010	Battery discharge with over temperature warning
0x1011	Battery charge with under temperature warning
0x1012	Battery discharge with under temperature warning
0x2001	Battery under voltage protect
0x2002	Battery and cell over discharge protect
0x2003	Battery over charge protect
0x2004	Battery over voltage and cell over charge protect
0x2005	Battery under temperature protect
0x2006	Battery over temperature protect
0x2007	Battery charge over current protect
0x2008	Battery discharge over current protect
0x2009	Cell over discharge protect
0x2010	Cell over charge protect
0x3000	Communication broken between master and slave Battery
0x3001	Address select fault

## 9 Firmware Update

It is possible to update the BMS firmware version manually via the WIFI monitor system App.

After a new firmware version is uploading to the server, the firmware could be updated over the Internet by itself after holder confirmed.

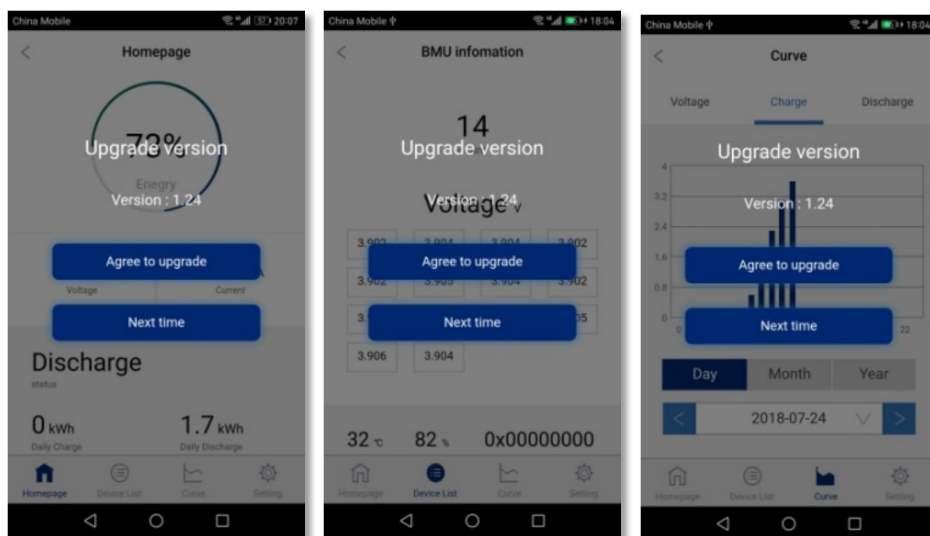



## Warranty of ESP Residential ESS

This warranty specified below applies to ESS supplied by ESP, ESP LFP battery to consumer through authorized reseller. The accessories and tool kits provided are not included. If the unit suffers major failure you will be provided with a replacement unit and your warranty will be transferred to the new unit. The units must only be used with controllers or equipment which is explicitly deemed compatible by ESP vendors. In order to supply a high quality service, you should make sure the unit remains connected with Internet so that it can be remotely checked.

### 1. Purpose

The purpose of this warranty is to define the matters related to warranty policy of products.

### 2. Warranty Condition

#### 2.1 Warranty Period

The products warranty period is ten (10) years from the sales date as mentioned in the Seller's invoice to the End User ("Invoice Date") or six ( 6) month from the date of manufacturing whichever comes first.

This Warranty period covers a capacity equivalent to one (1) full cycle per day. Full cycle: Discharge the nominal capacity of a fully charged battery and fully charge it afterwards. Micro cycles sum up to full cycles according to amount of energy charged and discharged. Note: Products are unavailable to protect itself from the deep discharge/charging in condition of without communication connection.

Regarding Self-discharging degradation, 180 days after ex-work is ensured.

#### 2.2 Limitation of Warranty scope

Under this warranty, ESP is responsible for either battery replacement or battery repair. The period of Performance Guarantee will continue on any repaired unit. In the event of a replacement units, the period of Performance guarantee will transfer to the replacement unit.

In no event will ESP be liable for any consequential, incidental or punitive damages (including without limitation of loss of profit, harm to goodwill or business reputation, or delay damages) arising from or out or the product or its installation, use, performance or non-performance, or any defect or breach of warranty, whether based on contract, warranty, negligence, strict liability, or any other theory. ESP's





aggregate liabilities, if any, in damages or otherwise, shall not exceed the purchase price paid by the original buyer for the product.

The ESP battery is charged at 50% SOC when it leaves the factory, and the battery will self-discharge a certain percentage (<3%/month) during static storage. The ESP battery has a safe shelf life of 80 days from the date of production completion to the date of installation. If the battery is more than 80 days from the production completion date to the installation date, the battery needs to be sampled and tested, and the battery sampling ratio is 5%. The detection method is to test the voltage at both ends of the battery B+/B- with a standard DC voltmeter. If the voltage value is kept between 48V and 50V, the battery can still be stored for 3 to 4 months. If the voltage value is lower than 48V (<48V), you need to return to the original factory for charging.

When the ESP battery exceeds 80 days from the production completion date to the installation date, and the battery test voltage value is lower than 48V, it needs to be returned to the original factory for charging.

## **2.3 Exclusions of Warranty**

Damage or impairment to the Products resulting from any of following activities are NOT covered by this Warranty:

- ✓ Installation or use with any devices not approved as compatible by ESP.
- ✓ Failure to install or use the battery in the way intended, or as demonstrated in the installation manual including incorrect installation of cables and connections.
- ✓ Failure caused by charger or inverter unit.
- ✓ Incorrect transportation, storage, installation or wiring by consumer or installer; if buyer fails to use the original packing materials provided by seller during the transportation of equipment the products damage or failure shall not fall under the warranty scope of the product.
- ✓ Mistreatment of the product including incorrect installation environment, incorrect temperatures or using the units other than in the specified manner.
- ✓ Damage caused by any impact, physical trauma to the unit such as dropping or mishandling.
- ✓ Attempts to change the functionality of the unit in any way, exposure of the Product to movement or shaking following installation, or temperatures of more than 50°C or below -10°C;
- ✓ Using the battery outside of the clearly stated performance criteria for the unit.
- ✓ Water ingress, corrosive gas damage or installation in dirty environments causing particles to affect performance.
- ✓ Anyone other than those authorized by ESP may not modify, disassemble, repair or replace the product;



- ✓ The unit must have clearly identifiable and authentic serial number and labels on the unit.
- ✓ Products suffered any external influences including unusual physical force, electrical stress (power failure surges, inrush current, lightning, flood, fire, accidental breakage, etc)
- ✓ Extensive superficial damage to the case demonstrating impact or mishandling or poor protection of the battery.
- ✓ Product damage and defect caused by deliberately or willful act.
- ✓ Products failure is not reported to seller or ESP authorized service partner within 1 week of appearance.
- ✓ The Product not being operated for any period of 6 months or more.
- ✓ Unusual physical or electrical stress caused by **Force majeure**, such as power failure surges, inrush current, lightning, flood, fire, accidental breakage, etc.;

### **3 Performance Warranty**

ESP guarantees that ESP-LFP battery will retain greater than or equal to 70% of output energy capacity for 10 years from the Invoice date and follow the specification and the user manual provided by ESP.

- ✓ Capacity measurement condition (referenced IEC: 62619)
- ✓ Ambient temperature:  $25 \pm 2^{\circ}\text{C}$
- ✓ Total energy/Usable energy measured under specific conditions from ESP 0.2CC-CV at DC side.

But, if you suspect ESP's verification, the Product must be tested by an EU certified origination or a certified 3rd party testing company. Meanwhile, the cost of any 3<sup>rd</sup> party evaluation service charge should be borne by yourself, unless your claim is proven to be valid, in which case ESP will be responsible for the testing costs.

### **4 Warranty Policy**

If on arrival the product is not of acceptable quality the customer is entitled to have the goods repaired or replaced..

### **5 About Service Products/Parts**

Service product or accessory could be used as new or refurbished condition and ESP guaranteed which performance is equal to or higher than replaced device. If the product is no longer sold in the market, ESP would replace it with different kind of product with equal or higher functions and performances, or the residual annual depreciation value of the buyer paid price within the time limit for performance guarantee.

### **6 Claim Policy**





## EndurEnergy Systems, Inc.

4701 Patrick Henry Drive, Building 25, Santa Clara, CA 95054

Whether to repair or replace the Product will be determined by ESP in its sole discretion. Claims under this warranty must be made from authorized distributor whom the product was purchased. Meanwhile, you must notify your distributor or ESP of a claim by:

- ✓ Give a call or E-mail to your distributor;
- ✓ Contract with ESP hotline or Email us directly, within 48 hours of a faulty discovered.

The following items must be included:

- ✓ The original purchase receipt or equal valid document;
- ✓ Description of the alleged defect(s) to your distributor or ESP after service hot line or send email to ESP;
  
- ✓ The product's serial number and the initial installation date.

If you suspect the battery to be faulty, the unit should be returned to appointed distributor at the cost of the customer at approved costs. Having been checked by designated expert, if the unit is deemed faulty, we will dispatch a REPLACEMENT or FIXED unit and would credit the cost of returning the unit to us for testing (based on standard acceptable logistical costs).

## 7 Out Of Warranty

In the event the Product is out of warranty, ESP may (in its discretion) provide certain after-sales service to Original Buyer, but all the costs and expenses, such as parts, labour costs and travel expenses, shall be borne by Original Buyer. To request such after-sales service Original Buyer must provide sufficient information about any defects, to enable ESP Partner to determine whether such defects are capable of repair.

### **Note:**

Warranty period could be extended to Ten (10) years FOR FREE by successfully register your product on EndurEnergy website: <http://www.endurenergy.com/>, and the minimum capacity/remaining capacity in this document would be not less than 70% of the Nominal Capacity at the end of Warranty Period.



# RED Declaration of Conformity (DoC)

Unique identification of this DoC: .....

**We,**

Manufacturer's name: EndurEnergy System, Inc.

Manufacturer's Address: Workshop No.18, Demonstration Base of Traditional Industry Transformation, High-tech Zone, Qindu District, Xianyang City, Shaanxi Province, PEOPLE'S REPUBLIC OF CHINA

.....  
**declare under our sole responsibility that the product:**

product name: Lithium ion battery

trade name:

type or model: ESP-5100

relevant supplementary information: .....  
(e.g. lot, batch or serial number, sources and numbers of items)

**to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the RED Directive (2014/53/EU).**

**The product is in conformity with the following standards and/or other normative documents:**

HEALTH & SAFETY (Art. 3(1)(a)): IEC 62040-1:2017, IEC 62619:2017, EN 62311:2008; EN 50665:2017

EMC (Art. 3(1)(b)): EN IEC 61000-6-1:2019, EN 61000-6-3:2007/A1:2011, EN 301 489-1 V2.2.3:2019, Draft EN 301 489-17 V3.2.2:2019

SPECTRUM (Art. 3(2)): EN 300 328 V2.2.2:2019

OTHER (incl. Art. 3(3) and voluntary specs): N/A

Accessories: N/A

Software: N/A

Technical file held by: EndurEnergy System, Inc.

Place and date of issue (of this DoC): Du Teddy .....

Signed by or for the manufacturer: .....  
(Signature of authorised person)

Name (in print): .....

Title: .....